

For all your customer needs,  
call the Customer Service Center  
at 1-800-333-DISH(3474)

# IR-to-UHF Pro Upgrade Kit

## user's guide



135331





## WARNING AND ATTENTION SYMBOLS

You *must* be aware of safety when you install and use this system. This *User Guide* provides various procedures. If you do some of these procedures carelessly, you could *injure* or *kill* yourself or damage equipment or property. Some other procedures require special attention.



The **WARNING!** symbol means that if you are not careful:

You could *injure* or *kill* yourself, or  
You could damage equipment or property.



The **ATTENTION!** symbol means you should pay special attention to:

Important instructions for using the system, or  
Important instructions for maintaining the system.




The Class II Symbol alerts qualified service personnel to use only identical replacement parts in this apparatus.




## FOR YOUR SAFETY



Do *not* try to open the case of the receiver. There is risk of electrical shock, which may cause damage to the receiver and/or personal injury or death to you. There are *no* user-serviceable parts inside the receiver. Opening the receiver case or making unauthorized changes will void the warranty.

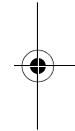



To reduce the risk of fire or electric shock, do *not* expose this appliance to rain or moisture.

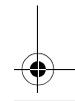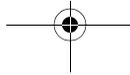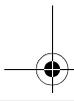



## TABLE OF CONTENTS

  
|                                                              |           |
|--------------------------------------------------------------|-----------|
| <b>Safety Instructions .....</b>                             | <b>2</b>  |
| <b>Introduction .....</b>                                    | <b>3</b>  |
| <b>Setting Up the Kit .....</b>                              | <b>5</b>  |
| Setting Up the Signal Converter.....                         | 5         |
| Setting Up the Remote Control .....                          | 9         |
| <b>Remote Control Operation .....</b>                        | <b>10</b> |
| Changing the Receiver and Remote<br>Control Addresses.....   | 10        |
| Checking the Remote Control Address.....                     | 11        |
| Setting Up to Control Other Devices .....                    | 11        |
| Operating Modes.....                                         | 17        |
| Controlling the Satellite Receiver .....                     | 17        |
| Controlling a TV (or a Second TV) .....                      | 25        |
| Controlling a VCR (or a Second VCR<br>or a DVD Player) ..... | 27        |
| Controlling a Tuner or Amplifier.....                        | 29        |
| <b>Changing Frequencies.....</b>                             | <b>31</b> |
| <b>Device Codes.....</b>                                     | <b>33</b> |
| <b>Troubleshooting the Kit .....</b>                         | <b>42</b> |
| <b>Limited Warranty .....</b>                                | <b>45</b> |
| Advance Exchange Program .....                               | 46        |
| Post Receipt Exchange Program .....                          | 46        |
| If You Need Help .....                                       | 47        |
| <b>Regulatory Factors.....</b>                               | <b>48</b> |





## SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Use only attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

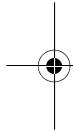

Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.



## INSTALLATION

*Observe Warnings:* Carefully follow all warnings on the device and in the operating instructions.

*Heat:* DO NOT place the device near heat sources such as radiators, stoves, heat registers, or other appliances that produce heat.

## CARE AND USE

*Cleaning:* DO NOT use liquid, abrasive, solvent, or aerosol cleaners. Use a damp cloth for cleaning.


*When Not in Use:* Remove the batteries if this device is to be left unattended or unused for a long period of time.



Refer servicing to qualified personnel when a solid object or liquid has fallen onto or into the device.



DO NOT attempt to service this device. Refer all servicing to qualified personnel. Opening covers other than the battery cover will void the warranty.

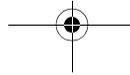


## INTRODUCTION

The IR-to-UHF Pro Upgrade Kit lets you use an ultra-high frequency (UHF) remote to control an infrared (IR) DISH Network satellite TV receiver from much farther away than with an IR remote control, even through walls that block IR signals.


**Note:** The remote control/converter combination included in this kit works only with compatible DISH Network receivers, and is not for any other devices. Compatible DISH Network receivers include all models except Model 7100/7200 (DISHPlayer), Model HM-DSR100RU (JVC-DVHS), Model 2000, Model 4000, and Model 5000. The UHF Pro remote can control other devices (a TV, for example) at short distances because it sends IR signals to such devices.

After you set up the kit, when you press any button on the UHF Pro remote control, the remote control sends a UHF signal to the converter.

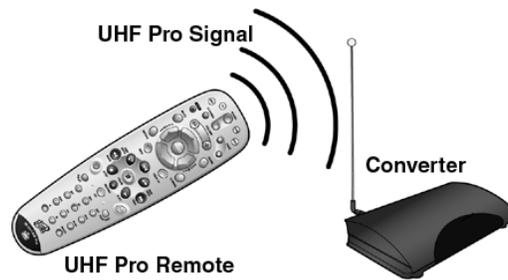


**Figure 1. UHF Pro Remote Control sends signals to the Converter**

Because the UHF signal can go through walls and other objects on its way to the converter, you can use the UHF Pro remote control in any room.

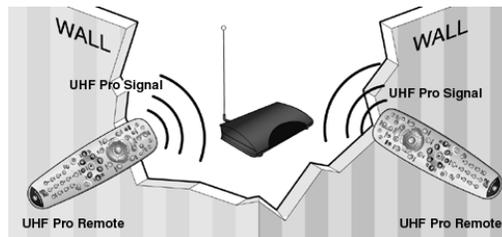

**Figure 2. UHF Pro signals go through walls and other objects**

The converter gets the UHF signal, changes it to IR, and sends the IR signal to the receiver. The best way to get the IR signal to the receiver is with the IR extender cable because the signal doesn't have to go through the air, but you can also use just the converter to send the signal to the receiver (see the example in Figure 3).

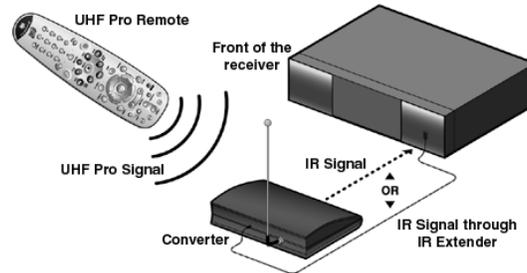

**Figure 3. The Converter changes the UHF Pro signals to IR to control the receiver**

The remote control that comes with the kit gives you easy access to all the features of a DISH Network satellite TV receiver. You can set up the remote to control the satellite TV receiver and up to three other devices. These devices can be a TV, a VCR or DVD player, and a third device. To control these devices, they must be in the same room as the remote control.

**Note:** This remote control may have more features than what your satellite receiver supports. See your receiver user's guide for information.

The remote control included with this kit uses only UHF radio signals to control the satellite receiver but uses IR to control other devices.

- UHF signals usually travel long distances (200 feet in open air) and can go through walls and other solid objects. You don't have to point a UHF Pro remote control toward the receiver, because UHF signals spread out in all directions.
- IR signals usually travel only short distances (40 feet or less), and can't go through walls or other solid objects. You must point an IR remote control toward the device, because IR signals travel in straight lines. There can't be any objects that block the signal path.

## SETTING UP THE KIT

The kit includes a UHF Pro remote control, batteries, an IR extender cable, an IR clip, an AC adapter, a converter, and a UHF antenna.

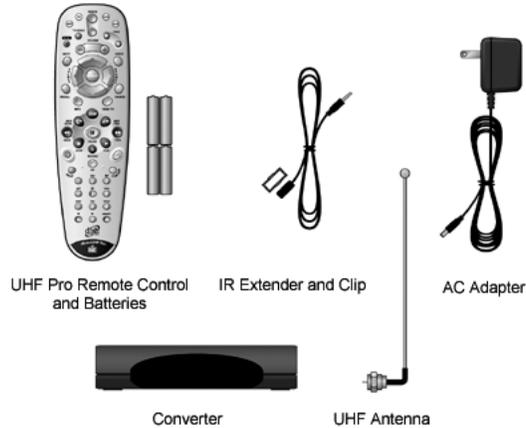


Figure 4. Parts of the IR-to-UHF Pro Upgrade Kit

## SETTING UP THE SIGNAL CONVERTER

1. Make sure you fully install the satellite TV system. See the satellite receiver's *User Guide*.
2. Select a location for the converter that has access to a 110 V power outlet and is close enough for the IR extender cable to reach the satellite receiver.
3. Refer to Figure 5 to complete steps a through d.



Figure 5. Converter Back Panel

- a. Attach the antenna to the **REMOTE ANTENNA** on the back of the converter. You may need to move the antenna around to find where it works best.





Tighten the connection only by hand. If you use a wrench, you may over-tighten the connection and damage your equipment. Such damage is not covered by the Limited Warranty.

- b. Make sure the **REMOTE KEY** switch matches the UHF Pro key at the bottom of the remote. If the switch setting does not match the key or if you'd like to change these settings, see *Changing Frequencies* on page 31.



- c. Plug in the IR extender cable to the **IR EXTENDER** connection on the back of the converter.



- d. Plug in the AC adapter to the **POWER** connection on the back of the converter.



- 4. Refer to Figures 6 and 7 to place the IR extender's IR head directly in front of the receiver's front panel IR sensor. The sensor may be in an egg-shaped dimple in the front panel, or behind a lens (the IR signal goes through the panel lens).

**Note:** The IR extender cable is the best way to get the IR signal from the converter to the receiver because the signal doesn't have to go through the air.



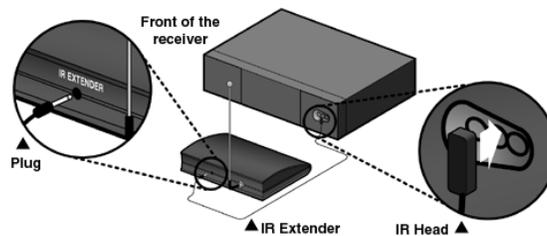


Figure 6. IR Sensor in an egg-shaped dimple

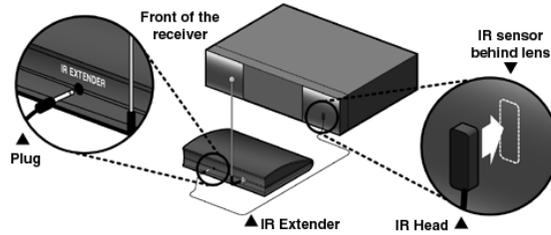


**Figure 7. IR Sensor behind a lens**

5. To secure the IR head, peel the paper off the strip of tape on the head (the IR signal goes through the tape), and stick the head into place.
6. For *DISH Player-DVR 522* and *DISH Player-DVR 625*, place the IR head about 1/4" from the left side of the front panel lens.

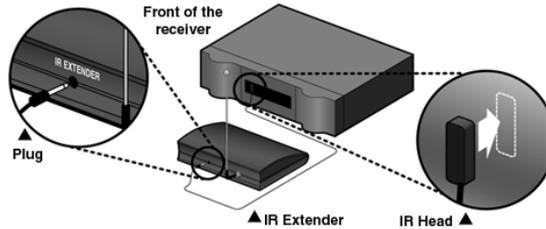


**Figure 8. DISH Player-DVR 522 IR sensor**

7. For *DISH 301*, *DISH 311*, *DISH 322* receivers, you can use the IR head clip to set up the IR extender cable.

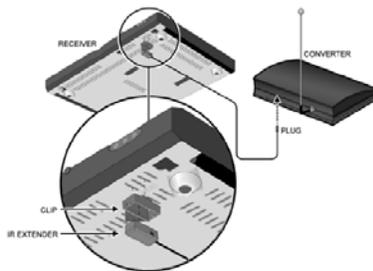

**Figure 9. Attach the IR Extender Head to the receiver's bottom panel**

- a. Attach the IR head clip to the receiver's bottom panel, on the grate directly behind the front panel's IR sensor. You *must* center the clip on the second slot from the left. There is a **CLIP** label on the bottom panel of some DISH 301, DISH 311, and DISH 322 receivers.
  - b. Fit the IR head into the IR head clip, and route the IR extender cable out through the clip's slot.
8. Route the IR extender cable under the back of the receiver, to the converter.
  9. You can also use just the converter to send the signal through the air to the receiver.

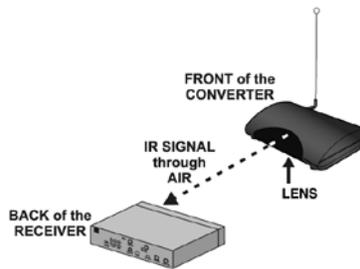

**Figure 9. UHF Pro signals are converted to IR and sent through the air to the receiver**

- a. Make sure you put the converter no more than 20 feet away from the receiver, and that the converter has a clear signal path to the receiver.
  - b. Make sure the lens of the converter points toward the receiver's front panel.
10. Plug the power cord into a wall outlet.
  11. Press any button on the remote control. A red light on the converter turns on whenever it receives a signal from the remote control.

## SETTING UP THE REMOTE CONTROL

### INSTALLING BATTERIES

The remote control requires AAA batteries. When you replace old batteries, you should replace *all* of the batteries. Use batteries of the same kind, *for example*, alkaline or carbon zinc, and *don't* mix batteries of different kinds. Alkaline batteries last longer.

1. Press down on the battery cover and slide the cover off.
2. If you are replacing batteries, take out all of the old batteries.
3. Put the new batteries in. Make sure you match the plus (“+”) ends with the plus markings on the battery case.
4. Slide the cover back into place.



### SETTING UP TO CONTROL THE RECEIVER

The remote and the receiver must be set up on the same address so that the remote can control the receiver. When you get the kit, the remote is set up to control the receiver on address 1. However, your receiver may be set to a different address. There are two ways to set up the remote and receiver to work together on the same address. One way is to simply use the address from the existing IR remote control. If you do not have the existing IR remote control, use *Changing the Receiver and Remote Control Addresses* on page 10.

1. On the existing remote control, press and hold the SAT mode button for three seconds until all mode buttons light. Then, let go.
2. Press the POUND (#) button twice while watching the SAT mode button.
3. Count the number of times the SAT mode button flashes. This number is the remote address. For example, if the SAT mode button flashes 6 times, this indicates the remote address is set to 6.

Write the number here: \_\_\_\_\_

**Note:** If using more than one UHF Pro remote control in your house, make sure that the remote controls are set to different addresses from each other.



4. On the UHF Pro remote control that came with the kit, press and hold the **SAT** mode button for three seconds until all mode buttons light. Then, let go. 
5. Use the **NUMBER PAD** buttons to enter the number you wrote in step 3.
6. Press the **POUND (#)** button. If you entered the address correctly, the **SAT** mode button will flash three times. 

### USING THE REMOTE CONTROL

After you have installed the converter and set up your UHF Pro remote control, make sure that the remote can control your receiver in the same room and also from other places where you want to use the remote control. If the remote cannot control the receiver, see *Troubleshooting the Kit* on page 42.

### REMOTE CONTROL OPERATION

This section describes how to use the remote control that came with the kit.

### CHANGING THE RECEIVER AND REMOTE CONTROL ADDRESSES

1. Open the **System Information** screen. Consult your receiver user's guide for instructions on how to open this screen without using the remote control. The **System Information** screen will show either one **Remote Address**, or it may show a **Primary Remote Address** and a **Secondary Remote Address**.

**Note:** On the DISH Player-DVR 522 and DISH 322, program the remote control on TV1 only.

2. Press and hold the **SAT** mode button about three seconds, until all the mode buttons light up, and then let go of the **SAT** button. The **SAT** mode button will blink. 
3. Use the **NUMBER PAD** buttons to enter any number from 1 to 16. The **SAT** mode button goes out after you enter each digit, and then lights up again.

Write down the number you entered: \_\_\_\_\_

**Note:** If using more than one UHF Pro remote control in your house, make sure that the remote controls are set to different addresses from each other.

4. Press the **POUND (#)** button. If you entered the address correctly, the **SAT** mode button will flash three times. 

5. Press the **RECORD** button.
6. Make sure the **System Information** screen shows the address number you entered in step 3.
7. Close the **System Information** screen. On most receivers, this is done by selecting **Done**. See your receiver user's guide for more information.



## CHECKING THE REMOTE CONTROL ADDRESS

To check the remote control address setting:

1. Press and hold the **SAT** mode button for three seconds until all mode buttons light. Then, let go.
2. Press the **POUND (#)** button twice while watching the **SAT** mode button.
3. Count the number of times the **SAT** mode button flashes. This number is the remote address. For example, if the **SAT** mode button flashes 6 times, this indicates the remote address is set to 6.



## SETTING UP TO CONTROL OTHER DEVICES

To use the remote to control other devices (such as a TV, VCR, DVD player, tuner/amplifier, or a second DISH Network satellite receiver), you must first program it to control these other devices. You can do this by either following the instructions in *Setting Up Using Device Code Tables* on page 12, or the *Setting Up Using Device Codes Scan* procedure described on page 13.

### COMBINATION DEVICES

If you are programming the remote to control a combination device, such as a TV/VCR or a TV/DVD, program the remote control in one mode, and then repeat the procedure in the other mode. For example, to program the remote to control a TV/VCR using code 748, follow the instructions to program the remote to control the TV using code 748, and then repeat the instructions for the VCR using the same code.

### LIMITED MODE

You can program your remote control in Limited Mode to keep from accidentally changing the channel on your TV or VCR. When you use the remote to control your TV in Limited Mode, you will only be able to use the **POWER**, **MUTE**, and **VOLUME** buttons to control your TV.

Also, when you use the remote to control your VCR in Limited Mode, you will only be able to use the POWER and VCR function buttons. The section *Setting Up Using Device Codes Tables* has a step that tells the remote control to go into Limited Mode.

**Note:** Limited Mode can not be used with audio amplifiers.

### SETTING UP USING DEVICE CODE TABLES

You can set up the remote to control other devices using the device codes listed on page 33.

1. Use the device's buttons or its remote control to turn on the device.
2. Find the brand name of the device in the tables starting on page 33.

If the brand isn't listed, see *Setting Up Using Device Codes Scan* on page 13.

3. Press and hold the mode button for the device you want the remote to control, for about three seconds. When all the other mode buttons light up, let go of the mode button - that mode button should now be flashing.

For example, hold the TV mode button for a TV until all of the other mode buttons light. When you let go, the TV mode light will flash.

4. *Only for the AUX mode*, Use a number button to enter 0 for a second TV, or 1 for a second VCR or DVD player, or 2 for a tuner or amplifier.
5. Use the number buttons to enter one of the device codes from the table.
6. Only for Limited Mode, Press 1.

**Note:** Skip this step if you do not want to use Limited Mode.



7. Press the POUND (#) button. If you entered the code correctly, the mode button flashes three times.



8. Press the blank POWER button to test if the code works for the device. If it does, the device should turn off.





9. Turn the device back on and try some other buttons to make sure they work. Sometimes, the blank POWER button works when other buttons don't. If the code works for other buttons, *stop here*.
10. If the code you entered *doesn't* work, do steps 3 through 9 *again* with another device code from the tables.
11. If you cannot find a code that works, try *Setting Up Using Device Code Scan*.

### SETTING UP USING DEVICE CODE SCAN

If the code for your device is not listed in the tables starting on page 33, use this procedure to scan the remote control's memory for the device code.

1. Use the device's buttons or its remote control to turn the device on.
2. Press and hold the mode button for the device you want the remote to control, for about three seconds. When all the other mode buttons light up, let go of the mode button - that mode button should now be flashing.

For example, hold the TV mode button for a TV until all of the other mode buttons light. When you let go, the TV mode light will flash.


3. *Only for the AUX mode*, use the number buttons to enter 0 for a second TV, 1 for a second VCR or DVD player, or 2 for a tuner or amplifier. Then press the STAR (\*) button.



4. Press the blank POWER button.




5. Press the up or down arrow button until the device turns off. You will have to do this repeatedly to scan through all codes.

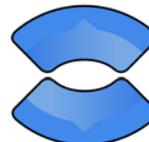

**Note:** The mode button for the device will flash rapidly eight times when you've scanned all the codes for that device.

6. If the remote reaches the correct code, the device turns off. When this happens, press the POUND (#) button to store the code in the remote.

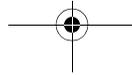

7. Press the blank **POWER** button to turn the device back on.
8. Try some other buttons to make sure they work. Sometimes, the blank **POWER** button works when other buttons don't.



### **PROGRAMMING THE REMOTE TO CONTROL A SECOND SATELLITE RECEIVER**

If you have another DISH Network satellite receiver installed, you can use this remote in **AUX** mode to control the second receiver. You can program the remote to control any other DISH Network satellite receiver, except for following:

- DISH 322 - TV2
- DISH Player-DVR 522 - TV2
- DishPlayer 7100/7200

1. Turn on the other receiver and display the **System Info** screen (see the user's guide for information on how to display the screen).

Write the address: \_\_\_\_\_

2. Press and hold **AUX** until all the other mode buttons light up, and then let go of the button. **AUX** flashes.
3. Press the **3** button.
4. Use the **NUMBER PAD** to enter the address you wrote in step 1.
5. Press **POUND (#)**. **AUX** blinks three times.



6. Press **RECORD** to make sure the address and the remote matches the address on the receiver



### **CHECKING THE DEVICE CODES**

You can find out what device code you've set for each remote control mode.

1. Press and hold the mode button for the device you want the remote to control, for about three seconds. When all the other mode buttons light up, let go of the mode button - that mode button should now be flashing.

For example, hold the **TV** mode button for a TV until all of the other mode buttons light. When you let go, the **TV** mode light will flash.

2. Press the POUND (#) button *twice*. The mode button flashes the number for each digit of the device code, with a pause between the groups of flashes. A quick flash is for zero. For example, if the code is 570, the mode button flashes five times, pauses, flashes seven times, pauses, and flashes once quickly.




For AUX mode, the first group of flashes tells you what the AUX mode controls. A quick flash (zero) before the three-digit code is for a TV; one regular flash is for a VCR or DVD player; and two flashes is for a tuner or amplifier. For example, if the TV code is 570, the AUX mode button flashes once quickly, pauses, flashes five times, pauses, flashes seven times, pauses, and flashes once quickly.

### **SWITCHING BETWEEN TV AND DEVICE VOLUME CONTROL**


When you set up the remote to control a TV, the MUTE and VOLUME buttons control the TV volume. However, if you want to use the AUX mode to control a tuner or amplifier and the device has a volume setting, you can set up the remote to control the device's volume instead of the TV volume.

#### **To set the remote to control the device's volume:**

1. Press and hold the AUX mode button for three seconds, and then let go of it. The AUX mode button will blink.
2. Press the POUND (#) button.
3. Press the plus (+) side of the VOLUME button.
4. Press the 0 number button.
5. Press the POUND (#) button. The AUX mode button flashes three times.
6. Press the SAT mode button.

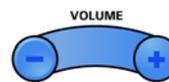

7. Press the plus (+) and minus (-) sides of the VOLUME button. The device's volume changes and the AUX mode button lights instead of the TV mode button.

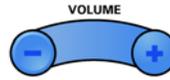

**To set the remote back to control the TV volume:**


1. Press and hold the TV mode button for three seconds, and then let go of it. The TV mode button will blink.



2. Press the POUND (#) button.



3. Press the plus (+) side of the VOLUME button.

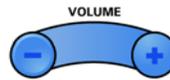

4. Press the 0 number button.




5. Press the POUND (#) button.  
The TV mode button flashes three times.



6. Press the SAT mode button.



7. Press the plus (+) and minus (-) sides of the VOLUME button. The TV's volume changes and the TV mode button lights instead of the AUX mode button.

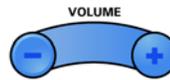

## OPERATING MODES

You can set the remote to four different modes to control the receiver or other devices. You may need to change the remote address to operate the receiver. See *Setting Up to Control the Receiver* on page 9. You must set up the remote to control a device like a TV, VCR, or DVD player. See *Setting Up to Control Other Devices* on page 11.

Use the remote control's mode buttons, SAT (satellite receiver), TV (for a TV), VCR (for a VCR or a DVD player), and AUX ("auxiliary," for a second TV, a second VCR, a tuner, or an audio amplifier) to set the remote to the right mode for the device.



To change the mode, press the button for the device you want the remote to control. The mode button lights for two seconds to show you've set the remote to that mode.

## CONTROLLING THE SATELLITE RECEIVER

### **SAT MODE BUTTON**

Press this button to set the remote to SAT ("satellite") mode to control the receiver. The SAT mode button's back light stays lit for about two seconds to show you've set the remote to SAT mode. Make sure you keep the remote in SAT mode to use the following buttons.

**Note:** The information in this section also applies when the AUX mode button is programmed for a second satellite receiver and the remote is in AUX mode.

**Note:** Your satellite receiver may not provide all of the functions described as follows. Consult your receiver user's guide for the features your receiver provides.

### **TV/VIDEO BUTTON**

If you connect the receiver with its back panel TV ANTENNA/CABLE IN and TV SET OUT ports, use this button to switch the receiver between the satellite signal (connect it to the SATELLITE IN port) and another video signal like a cable or broadcast TV antenna input (connect it to the receiver's TV ANTENNA/CABLE IN input).

Your receiver may use this button as an SD/HD INPUT button to toggle between HD and SD Output mode on high definition satellite receivers. Consult your receiver user's guide for how to use this button.




### **POWER BUTTONS**

Press the blank **POWER** button to turn the receiver on or off.

Press the **TV POWER** button to turn your TV off and on.

**Note:** You must set up the remote to control the TV for the **TV POWER** button to work. See *Setting Up to Control Other Devices* on page 11.

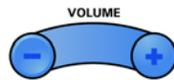

### **VOLUME BUTTON**

Press this button to raise (+) or lower (-) the TV sound volume.

**Note:** You must set up the remote to control the TV for the **VOLUME** button to work. See *Setting Up to Control Other Devices* on page 11.



### **MENU BUTTON**

Press this button to open the **Main Menu**.



### **MUTE BUTTON**

Press this button to turn the TV sound on or off.

**Note:** You must set up the remote to control the TV for the **MUTE** button to work. See *Setting Up to Control Other Devices* on page 11.



### **PAGE UP AND PAGE DOWN BUTTONS**

Press the **PAGE UP** button or the **PAGE DOWN** button to scan, page by page, through the **Program Guide**, a **Themes** list, a **Favorites List**, an **Event Timers** list, or a list of channels.

**Note:** An "event" is any satellite program.




GUIDE





### **GUIDE BUTTON**

Press this button to open the **Program Guide**. When you have the **Program Guide** open, press this button to change between your **Favorite Lists**.

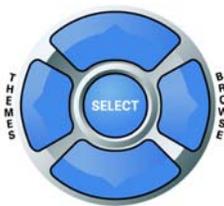

### **ARROW BUTTONS**

- Change channels while watching a program- Press the UP or DOWN arrow button.
- Open the **Browse Banner** - Press the RIGHT arrow button.
- Show **Themes** - Press the LEFT arrow button.
- Move around within the **Program Guide**, menus, and **Browse Banner** - Press the UP, DOWN, LEFT, and RIGHT arrow buttons.

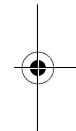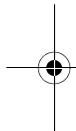


### **SELECT BUTTON**

Press this button to select the option you highlight in a menu.



### **RECALL BUTTON**

Press this button to go back to the last receiver channel you watched. Press it again to switch between the last two receiver channels you watched.

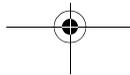



**INFO** **INFO BUTTON**

- Program information - Press the INFO button for more information when you watch a program, or when you have the **Program Guide**, **Browse Banner**, or **Themes** list open.
- Help - Press the INFO button to see help information when a **Help** button appears in a menu.



**VIEW TV** **VIEW TV BUTTON**

- When you watch a program, press this button to briefly display the **Program Banner**.
- When you use a menu, press this button to cancel and go back to watching a program.



**CANCEL** **CANCEL BUTTON**

Press this button to cancel and go back to the previous menu or to watching a program.



**DVR BUTTONS**

The following button descriptions mainly apply for remote controls used with DISH Player-DVR receivers. For a description of these buttons when controlling a VCR or DVD player, see page 27.



**DVR** **DVR BUTTON**

Press the DVR button to open the DVR Events menu, which shows all of the DVR Events recorded on the receiver.



### **PLAY BUTTON**

Press the **PLAY** button to play back a recorded event. Also, press this button to switch from pause, fast forward, or back to normal play back.



### **STOP BUTTON**

Press the **STOP** button to stop recording a program or to stop playing a recorded program.



### **PAUSE BUTTON**

Press the **PAUSE** button to pause a program. Press this button again to go back to watching the program.



### **FWD BUTTON**

Press the **FWD** (“forward”) button to:

- Move ahead through a program four times as fast as normal play. Press this button a second time to move ahead at 15 times, a third time to move ahead at 60 times, and a fourth time to move ahead at 300 times as fast as normal play.
- Move ahead through the program in slow motion. To use this feature, press the **PAUSE** button and then press the **FWD** button. Each time you press the **FWD** button, the program advances faster until it reaches normal speed. If you continue to press the button, the program will advance as described in the previous paragraph.



### **SKIP FWD BUTTON**

Press the **SKIP FWD** button to:

- Skip ahead about 30 seconds in a program. Press this button again to skip ahead again.
- Skip ahead one frame at a time. To use the frame advance feature, press the **PAUSE** button and then press the **SKIP FWD** button.
- Skip ahead one day at a time in the **Program Guide**.



### **BACK BUTTON**

Press the **BACK** button to:

- Move back through a program four times as fast as normal play. Press this button a second time to move back at 15 times, a third time to move back at 60 times, and a fourth time to move back at 300 times as fast as normal play.
- Move back through the program in slow motion. To use this feature, press the **PAUSE** button and then press the **BACK** button. Each time you press the **BACK** button, the program reverses faster until it reaches normal speed. If you continue to press the button, the program will reverse as described in the previous paragraph.



### **SKIP BACK BUTTON**

Press the **SKIP BACK** button to:

- Skip back about ten seconds in a program. Press this button again to skip back again.
- Skip back a few frames at a time. To skip back through a few frames, press the **PAUSE** button and then press the **SKIP BACK** button.
- Skip back one day at a time in the **Program Guide**.

**Note:** The skip back button will not skip back the **Program Guide** beyond the current date and time.



### **RECORD BUTTON**

Press the **RECORD** button to record a program.

**Note:** You also use this button if you change the remote control address. See *Setting Up to Control the Satellite Receiver* on page 9.



### **PICTURE-IN-PICTURE (PIP)**

Press the **PIP** button to open the **PIP** window. To make the **PIP** window larger, press this button again. Press the button a third time to close the **PIP** window. See your receiver user's guide for more information on using the **PIP** feature.



### **POSITION BUTTON**

Press the **POSITION** button to move the **PIP** window to different positions on the TV screen. Each time you press this button, the **PIP** window moves to a different position. See your receiver user's guide for more information on using the PIP feature.



### **SWAP BUTTON**

Press the **SWAP** button to swap the video in the main display with the video in the **PIP** window. See your receiver user's guide for more information on using the PIP feature.



### **RECOVER BUTTON**

Use the **RECOVER** button if you accidentally change the channel or video input on your TV and cannot get the picture back from your satellite receiver. When you press the **RECOVER** button as described in the following section, the remote control sends commands to your TV and VCR (if set up) to change channels or video inputs to try to get you back to watching satellite programming.

**Note:** **RECOVER** only works if the remote control has been set up to control the TV and/or VCR, if connected (see *Setting Up to Control Other Devices* on page 11).

This procedure works only if you have accidentally changed the TV channel or video input. It does not recover lost satellite signal (see *Troubleshooting the Kit* for troubleshooting information). The following setup is required to use the **RECOVER** button:

- The remote control must be set up to control the TV and, if installed, the VCR (see your satellite receiver's *User Guide* or the *Installation Instructions*).
- If a VCR is installed, make sure it is connected as shown in your satellite receiver's *User Guide*.

To use the **RECOVER** button, complete the following instructions:

1. Press and hold the **RECOVER** button until all four mode buttons light, and then let go of the button. The **SAT** mode button flashes twice and then all four mode buttons flash three times.
2. Press the **RECOVER** button. Wait for the **TV** or **VCR** mode button to flash once and then all four mode buttons to flash once.


3. If you see the **System Info** screen, press the **SELECT** button to close the screen. You have recovered your satellite video.
4. If you do not see the **System Info** screen, repeat steps 2 and 3 until you have recovered your satellite video.

**Note:** Press any remote control button other than the **RECOVER** button to end this procedure.



### **DISH BUTTON**

Press the dish button to go to **dish home Interactive TV** for receivers that support this feature.

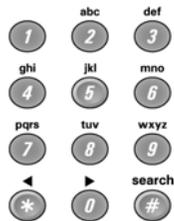

### **NUMBER BUTTONS**

- Change the channel - Use the **NUMBER** buttons to enter a channel number to change the channel. If you have the **Program Guide** open, use the **NUMBER** buttons to jump to the channel listing on the **Program Guide**.
- Scroll through the **Program Guide** by time - When you have the **Program Guide** open, enter a number of hours using these buttons, and then press the **RIGHT** or **LEFT** arrow button to skip the **Program Guide** forward or backward that many hours.
- Enter menu options - For an option with a number, you can press the number for that option *instead of* highlighting and selecting the option.
- Enter numbers in a blank - Highlight the place where you need to enter the number. Press a number button(s) (or, you can use the **UP/DOWN** arrow buttons to enter the number).

**Search** - Use the letters above the **NUMBER** buttons while in the **Search** menu. For example, when looking for the channel and times to watch *Rudy Fremmel Presents*, you press **7** three times for an **R**, **8** two times for a **U**, **3** one time for a **D**, and **9** three times for a **Y** to spell the word "Rudy" (see your receiver's user guide for more information).



### **STAR BUTTON**

Press the STAR button to back space while using the search function of your receiver.

A high definition satellite receiver may use this button to toggle through the available display modes (Normal, Zoom) for widescreen displays. See your receiver user's guide for more information.

search



### **POUND (#) BUTTON**

Press the POUND button to display the **Search** screen. Also, you use this button in several procedures in this user guide.

## **CONTROLLING A TV (OR A SECOND TV)**

Only the buttons described here control a TV. Some of the buttons described here may *not* control your TV. See your TV user's manual for information about the TV's features.

You can set up the remote to control a second TV in AUX mode, the same way it controls the first TV in TV mode. See *Setting Up to Control Other Devices* on page 11.



### **TV MODE BUTTON**


You must first set up the remote to control the TV. See *Setting Up to Control Other Devices* on page 11. Then press the TV mode button to set the remote to TV mode. The TV mode button will stay lit for two seconds to show you've set the remote to TV mode. Make sure you keep the remote in TV mode to use the buttons described in this section.

TV/VIDEO



### **TV/VIDEO BUTTON**

If the TV has video input options, use this button to switch the TV video input.

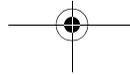



### **POWER BUTTONS**


Press *either* POWER button to turn the TV on or off.

**Note:** If you set up the remote to control one TV in TV mode and an additional TV in AUX mode, pressing the TV POWER button controls *only* the TV you set up in TV mode.




### **MUTE BUTTON**

Press this button to turn the TV sound on or off.

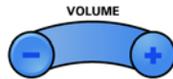

### **VOLUME BUTTON**

Press this button to raise (+) or lower (-) the TV sound volume.

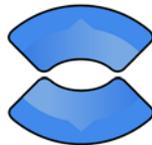

### **UP/DOWN ARROW BUTTONS**

Use these buttons to change channels on the TV.

**Note:** These buttons do not change the channels on the TV if the remote control is in Limited Mode.



### **SELECT BUTTON**


The SELECT button works as the ENTER button for a TV.



**RECALL BUTTON**

Press this button to go back to the last TV channel you watched. Press it again to switch between the last two TV channels you watched.

**Note:** These buttons do not change the channels on the TV if the remote control is in Limited Mode.

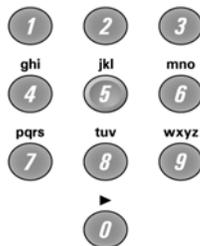

**NUMBER BUTTONS**

Use these buttons to directly enter a different channel.

**Note:** These buttons do not change the channels on the TV if the remote control is in Limited Mode.

**CONTROLLING A VCR (OR A SECOND VCR OR A DVD PLAYER)**

Only the buttons described here control a VCR or DVD player. Some of the buttons we tell you about here may *not* control your VCR. See your VCR or DVD player user's manual for information about the features.

You can set up the remote to control a second VCR or DVD player in AUX mode, the *same* way it controls the first VCR or DVD player in VCR mode. See *Setting Up to Control Other Devices* on page 11.



**VCR MODE BUTTON**

You must first set up the remote to control the VCR or DVD player. See *Setting Up to Control Other Devices* on page 11. Then press the VCR mode button to set the remote to VCR mode. The VCR mode button will stay lit for two seconds to show you've set the remote to VCR mode. Make sure you keep the remote in VCR mode to use the buttons we tell you about here.

You must put the remote in VCR mode to set it up to control a DVD player. Put the remote in VCR mode to use it to control a DVD player.




**TV/VIDEO BUTTON**

Use this button to switch the VCR between its TV mode and its VCR mode (see your VCR user's manual for information).



**POWER BUTTON**

Press the blank POWER button to turn the VCR on or off. Press the TV POWER button to turn the TV on or off.

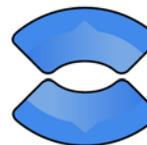

**UP/DOWN ARROW BUTTONS**

Use these buttons to change channels on the VCR.

**Note:** If you are using the remote control in Limited Mode, the VCR will not change channels.



**VIEW TV BUTTON**

**For VCR/DVD combinations only:** Press the VIEW TV button to switch between VCR and DVD functions.

 **VCR BUTTONS**

Press the **PLAY** button to play a videotape or DVD.



Press the **STOP** button to stop playing or recording on a videotape. Press the **STOP** button to stop playing a DVD.



Press the **PAUSE** button to pause a videotape or DVD. Press this button or the **PLAY** button to play the tape or DVD.



Press the **FWD** (“forward”) button to forward a videotape or DVD.



Press the **BACK** button to rewind a videotape or reverse a DVD.



Press the **RECORD** button to record on a videotape.



**CONTROLLING A TUNER OR AMPLIFIER**

Only the buttons described here control a tuner or amplifier. Some of the buttons described here may not control your tuner or amplifier. See the device user’s manual for information.

 **AUX MODE BUTTON**

You must first set up the remote to control the device. See *Setting Up to Control Other Devices* on page 11. Then press the **AUX** mode button to set the remote to AUX mode. The **AUX** mode button will stay lit for two seconds to show you’ve set the remote to AUX mode. Make sure to keep the remote in AUX mode to use the following buttons.



### **POWER BUTTON**


Press the blank POWER button to turn the tuner or amplifier on or off.  
Press the TV POWER button to turn the TV on or off.



### **MUTE BUTTON**

Press this button to turn on or off the sound.


**Note:** Program the remote to control the device's volume by following the instructions on page 15.

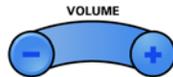

### **VOLUME BUTTON**

Press this button to raise (+) or lower (-) the sound volume.

**Note:** Program the remote to control the device's volume by following the instructions in *Switching Between TV and Device Volume Control* on page 15.

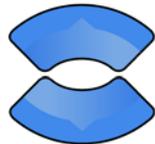

### **UP/DOWN ARROW BUTTONS**

Use these buttons to change channels on the tuner or amplifier.



### **SELECT BUTTON**

This button works as the INPUT SELECT button for the tuner or amplifier.

## CHANGING FREQUENCIES

If you have more than one IR-to-UHF Pro Converter kit in your house, or if you think you are experiencing interference from another source (for example, another remote control), you can change the frequency of the kit. The remote control included with your kit has a switchable key at the bottom that matches the switch on the back of the converter.





**Note:** If using more than one UHF Pro remote control in your house, make sure that the remote controls are set to different addresses from each other.

1. Change the switch setting:
  - If set on **BLACK**, change the switch to **SILVER**.
  - If set on **SILVER**, change the switch to **BLACK**.

2. Slide the battery cover off.
3. Insert your thumbnail in the seam between the remote control and the key to separate the key from the remote control.






4. Grasp the key at the bottom and pull down firmly to remove.

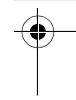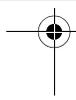




5. Turn the key over to match the setting of the switch.



6. Reinstall the key in the remote control.

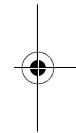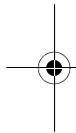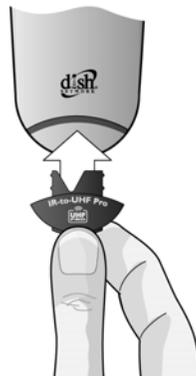

7. If you have not already installed batteries, install them now. See *Installing Batteries* for further details.
8. Slide the battery cover back into place.

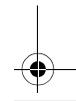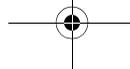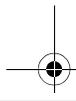

## DEVICE CODES

These tables contain the manufacturer codes for programming the remote to control a TV, VCR, DVD player, or audio amplifier. Every attempt has been made to include all codes. If your device brand is not listed or if the codes do not work, the remote may not control your device. In some cases codes may operate some but not all buttons.

### TV CODES

**Programming in AUX mode:**  
Press 0 before entering the TV code.

| TV            | Codes                                                                     |
|---------------|---------------------------------------------------------------------------|
| A Mark        | 670                                                                       |
| Action        | 662                                                                       |
| Admiral       | 514, 521, 605, 668, 669, 675                                              |
| Aiko          | 727                                                                       |
| Aiwa          | 751                                                                       |
| Akai          | 570, 573, 659, 660,                                                       |
| A-Mark        | 620                                                                       |
| Amtron        | 657                                                                       |
| Anam National | 509, 541, 620, 651, 657, 661, 663, 698                                    |
| AOC           | 505, 506, 519, 520, 573, 620, 627, 652, 653, 654, 659, 664, 665, 670, 672 |
| Apex          | 743, 744, 745                                                             |
| Archer        | 620                                                                       |
| Audiovox      | 620, 657, 662, 672                                                        |
| Bell & Howell | 590, 669, 675                                                             |
| Broksonic     | 659, 661, 748, 752                                                        |
| Capehart      | 519, 627                                                                  |
| Citizen       | 506, 516, 523, 524, 525, 526, 590, 652, 654, 657, 658, 680, 727           |
| Classic       | 659                                                                       |

| TV            | Codes                                                                                                        |
|---------------|--------------------------------------------------------------------------------------------------------------|
| Colortyme     | 573, 627, 652, 654, 660, 667, 668, 671, 674, 679, 681                                                        |
| Contec/Cony   | 541, 655, 657, 661, 662, 726                                                                                 |
| Craig         | 536, 541, 657, 661, 662, 666, 667, 694                                                                       |
| Crown         | 526, 536, 657, 666, 670                                                                                      |
| Curtis Mathes | 506, 516, 526, 573, 590, 641, 645, 650, 652, 654, 658, 659, 660, 664, 665, 667, 668, 670, 674, 680, 703, 708 |
| Daewoo        | 505, 524, 526, 529, 530, 531, 573, 652, 653, 654, 658, 659, 663, 664, 665, 670, 672, 674, 684, 698, 719, 727 |
| Daytron       | 526, 627, 652, 654, 658, 665, 670, 672                                                                       |
| Dell          | 772, 773, 774                                                                                                |
| Dimensia      | 645, 650                                                                                                     |
| DISH Network  | 722, 742                                                                                                     |
| Dixi          | 566, 620                                                                                                     |
| Dumont        | 501, 627, 652                                                                                                |
| Electrohome   | 526, 573, 651, 652, 654, 656, 659, 660, 665, 670, 709, 728                                                   |

| TV            | Codes                                                                                                                                                                         |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Emerson       | 526, 534, 535, 536, 537, 538, 539, 541, 573, 590, 627, 636, 642, 648, 652, 654, 655, 657, 658, 659, 660, 661, 662, 665, 666, 667, 669, 670, 677, 679, 682, 692, 696, 699, 720 |
| Envision      | 506, 573, 652, 654, 660, 664                                                                                                                                                  |
| Fisher        | 542, 590, 683                                                                                                                                                                 |
| Fujitsu       | 534, 682, 694                                                                                                                                                                 |
| Funai         | 534, 541, 657, 661, 662, 677, 682, 694                                                                                                                                        |
| GE            | 508, 509, 543, 544, 630, 645, 646, 650, 651, 652, 654, 659, 661, 663, 665, 667, 668, 670, 673, 676, 681, 690, 691, 698, 701, 715, 716, 725, 728, 742                          |
| Goldstar      | 505, 523, 526, 545, 546, 566, 573, 652, 653, 654, 655, 656, 658, 659, 660, 664, 665, 670, 671, 678, 693, 730, 747                                                             |
| Gradiente     | 660, 671                                                                                                                                                                      |
| Granada       | 627, 670, 671                                                                                                                                                                 |
| Grundig       | 670, 673                                                                                                                                                                      |
| Hallmark      | 627, 652, 654, 659                                                                                                                                                            |
| Harmon/Kardon | 561, 659                                                                                                                                                                      |
| Hinari        | 534                                                                                                                                                                           |
| Hitachi       | 523, 526, 548, 549, 553, 554, 555, 585, 597, 626, 636, 638, 643, 648, 652, 654, 655, 665, 668, 669, 670, 672, 673, 702, 718, 726                                              |
| Infinity      | 566, 671                                                                                                                                                                      |
| JBL           | 566, 671                                                                                                                                                                      |

| TV              | Codes                                                                                                                                                     |
|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| JC Penney       | 505, 506, 516, 525, 526, 543, 546, 631, 645, 646, 650, 652, 653, 654, 658, 659, 664, 667, 668, 670, 673, 676, 678, 680, 690, 691, 701, 725, 726, 728, 730 |
| Jensen          | 556, 573, 652, 654, 660                                                                                                                                   |
| JVC             | 508, 557, 559, 642, 649, 655, 667, 673, 676, 726, 735, 736, 737                                                                                           |
| Kawasho         | 548, 561, 573, 652, 654, 664                                                                                                                              |
| Kenwood         | 506, 573, 652, 654, 656, 659, 660, 664, 679, 681                                                                                                          |
| Kloss Nova-beam | 657, 663, 698, 723, 724                                                                                                                                   |
| Konka           | 753                                                                                                                                                       |
| KTV             | 526, 539, 541, 573, 657, 658, 661, 662, 664, 665, 670, 696                                                                                                |
| Lloyds          | 627, 679                                                                                                                                                  |
| Loewe           | 566                                                                                                                                                       |
| Logik           | 675                                                                                                                                                       |
| Luxman          | 523, 652, 654                                                                                                                                             |
| LXI             | 563, 566, 590, 595, 667, 631, 635, 645, 646, 650, 654, 659, 668, 678, 683, 691, 701, 725                                                                  |
| Magnasonic      | 573, 659, 660, 669, 672, 677                                                                                                                              |
| Magnavox        | 506, 520, 525, 536, 566, 567, 568, 573, 610, 652, 654, 656, 659, 660, 664, 665, 666, 669, 671, 673, 674, 677, 723, 724, 729                               |
| Majestic        | 675                                                                                                                                                       |
| Marantz         | 506, 566, 573, 652, 654, 660, 664, 665, 671, 678, 681                                                                                                     |

| TV              | Codes                                                                                                        |
|-----------------|--------------------------------------------------------------------------------------------------------------|
| Megatron        | 627, 654                                                                                                     |
| Memorex         | 590, 627, 653, 654, 659, 675, 678, 720                                                                       |
| MGA             | 504, 505, 506, 542, 571, 573, 627, 652, 653, 654, 656, 660, 728                                              |
| Mitsubishi      | 504, 505, 542, 570, 571, 572, 573, 597, 623, 627, 652, 653, 654, 656, 659, 660, 664, 665, 670, 671, 705, 728 |
| Montgomery Ward | 675                                                                                                          |
| Motorola        | 521, 605, 651                                                                                                |
| MTC             | 505, 506, 516, 523, 573, 627, 652, 653, 654, 659, 664, 667, 672, 680                                         |
| Multitech       | 657                                                                                                          |
| NAD             | 502, 617, 627, 631, 635, 637, 654                                                                            |
| National        | 509                                                                                                          |
| NEC             | 505, 506, 507, 517, 523, 573, 627, 651, 652, 653, 654, 660, 664, 665, 679, 681, 731, 732                     |
| Nikkai          | 612                                                                                                          |
| Nikko           | 654, 672, 727                                                                                                |
| Onwa            | 541, 657, 661                                                                                                |
| Optimus         | 637                                                                                                          |
| Optonica        | 521, 605, 607                                                                                                |
| Orion           | 694                                                                                                          |
| Osaki           | 612                                                                                                          |
| Panasonic       | 508, 509, 510, 512, 566, 644, 651, 662, 663, 668, 672, 673, 676, 685, 689, 698, 700, 716, 734, 747           |

| TV                        | Codes                                                                                                                                                                    |
|---------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Philco                    | 505, 506, 525, 536, 568, 573, 610, 651, 652, 653, 654, 655, 656, 659, 660, 664, 665, 666, 669, 671, 672, 674, 677, 723, 724, 729                                         |
| Philips                   | 525, 566, 651, 652, 655, 656, 671, 690, 723, 724, 729                                                                                                                    |
| Pioneer                   | 502, 548, 576, 636, 637, 648, 652, 654, 663, 665, 681, 708                                                                                                               |
| Portland                  | 505, 526, 573, 652, 654, 658, 659, 664, 665, 670, 727                                                                                                                    |
| Price Club                | 680                                                                                                                                                                      |
| Prism                     | 676                                                                                                                                                                      |
| Proscan                   | 645, 646, 650, 668, 691, 725, 742                                                                                                                                        |
| Proton                    | 513, 519, 526, 536, 585, 627, 652, 654, 655, 659, 660, 665, 666, 668, 670, 678                                                                                           |
| Quasar                    | 508, 509, 651, 663, 673, 676, 698, 700, 747                                                                                                                              |
| Radio Shack/<br>Realistic | 526, 541, 590, 607, 612, 645, 650, 652, 654, 655, 657, 658, 661, 662, 663, 668, 670, 683, 698, 730                                                                       |
| RCA                       | 503, 505, 548, 586, 630, 633, 634, 636, 641, 645, 646, 648, 650, 651, 652, 653, 654, 656, 661, 663, 665, 667, 668, 670, 681, 691, 698, 701, 708, 715, 716, 725, 742, 749 |
| Runco                     | 501                                                                                                                                                                      |
| Sampo                     | 506, 519, 652, 654, 658, 663, 664, 665, 698, 730, 746                                                                                                                    |

| TV         | Codes                                                                                                                                           |
|------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| Samsung    | 505, 506, 516, 523, 526, 566, 573, 612, 627, 647, 652, 653, 654, 655, 656, 658, 659, 664, 665, 667, 669, 670, 679, 680, 704, 717, 730, 738      |
| Sansui     | 754                                                                                                                                             |
| Sanyo      | 542, 590, 652, 683                                                                                                                              |
| SBR        | 566                                                                                                                                             |
| Schneider  | 566                                                                                                                                             |
| Scott      | 526, 534, 537, 541, 600, 652, 654, 655, 657, 661, 662, 665, 670, 677, 682, 696, 701                                                             |
| Sears      | 523, 534, 542, 563, 590, 595, 601, 604, 617, 627, 631, 635, 645, 646, 650, 652, 654, 656, 659, 661, 668, 670, 682, 683, 688, 691, 703, 725, 726 |
| Sharp      | 521, 526, 585, 605, 607, 628, 629, 652, 654, 655, 658, 669, 670, 674, 679, 739, 740, 741                                                        |
| Signature  | 675                                                                                                                                             |
| Solavox    | 612                                                                                                                                             |
| Sony       | 500, 578, 640, 670, 690                                                                                                                         |
| Soundesign | 525, 536, 541, 627, 652, 654, 657, 659, 661, 665, 666, 682                                                                                      |
| Starlite   | 657                                                                                                                                             |
| Supra      | 523                                                                                                                                             |
| Sylvania   | 506, 525, 536, 566, 568, 569, 573, 600, 610, 652, 654, 656, 659, 660, 664, 665, 666, 671, 672, 674, 677, 723, 724, 729, 733                     |
| Symphonic  | 632, 657, 662, 677, 692, 694                                                                                                                    |

| TV                  | Codes                                                                                                                                                               |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Tandy               | 521, 605                                                                                                                                                            |
| Tatung              | 509, 651, 663, 698                                                                                                                                                  |
| Technics            | 508, 673, 676                                                                                                                                                       |
| Techwood            | 523, 573, 652, 654, 660, 676                                                                                                                                        |
| Teknika             | 504, 505, 512, 516, 523, 524, 525, 526, 534, 536, 541, 573, 644, 652, 653, 654, 655, 657, 658, 661, 662, 664, 665, 666, 670, 672, 675, 680, 681, 682, 685, 726, 727 |
| Telefunken          | 679                                                                                                                                                                 |
| Toshiba             | 516, 590, 617, 631, 635, 667, 678, 680, 683, 688, 750, 751                                                                                                          |
| Totevision          | 526, 658, 668                                                                                                                                                       |
| Ultra               | 672                                                                                                                                                                 |
| Universal           | 543, 690                                                                                                                                                            |
| Vector, Research    | 506                                                                                                                                                                 |
| Video Concepts      | 570, 661                                                                                                                                                            |
| Wards               | 536, 573, 607, 645, 650, 652, 653, 654, 656, 659, 664, 665, 666, 667, 668, 669, 674, 675, 677, 678, 682, 690, 715, 723, 724, 729                                    |
| White, Westinghouse | 659, 664, 670, 672, 674                                                                                                                                             |
| Yamaha              | 505, 506, 573, 652, 653, 654, 656, 664, 666, 672, 679                                                                                                               |
| Zenith              | 501, 520, 639, 652, 653, 654, 686, 664, 666, 672, 679                                                                                                               |

### VCR CODES

**Programming in AUX mode:**  
Press 1 before entering the VCR code.

| VCR           | CODES                                                                          |
|---------------|--------------------------------------------------------------------------------|
| Aiwa          | 588, 622, 623                                                                  |
| Akai          | 513, 514, 515, 516, 517, 518, 520, 568, 682                                    |
| Alba          | 546                                                                            |
| Amstrad       | 588                                                                            |
| ASA           | 556                                                                            |
| Audiovox      | 676                                                                            |
| Bell & Howell | 581                                                                            |
| Broksonic     | 559, 748                                                                       |
| Bush          | 589                                                                            |
| Calix         | 676                                                                            |
| Canon         | 554, 678, 679                                                                  |
| Capehart      | 546                                                                            |
| CCE           | 681                                                                            |
| Citizen       | 534, 591, 592, 594, 675, 676, 677, 684                                         |
| Colortyme     | 592                                                                            |
| Craig         | 591, 658, 675, 676, 681, 685, 687, 688                                         |
| Curtis Mathes | 554, 592, 594, 605, 607, 675, 677, 678, 679, 683, 684                          |
| Daewoo        | 506, 534, 546, 547, 559, 588, 684                                              |
| Daytron       | 546                                                                            |
| Denon         | 686                                                                            |
| Dimensia      | 607                                                                            |
| Dumont        | 549                                                                            |
| Electrohome   | 512, 676, 687                                                                  |
| Emerson       | 505, 506, 508, 509, 511, 512, 534, 559, 568, 588, 590, 618, 676, 678, 684, 687 |
| Finlandia     | 549                                                                            |

| VCR           | CODES                                                                               |
|---------------|-------------------------------------------------------------------------------------|
| Finlux        | 549, 556, 588                                                                       |
| Fisher        | 548, 549, 581, 584, 588, 608, 610, 684, 688                                         |
| Fuji          | 678                                                                                 |
| Funai         | 588                                                                                 |
| Garrard       | 588                                                                                 |
| GE            | 550, 551, 552, 554, 572, 591, 605, 607, 675, 678, 679                               |
| Go Video      | 557, 558, 620, 685                                                                  |
| Goldstar      | 592, 594, 676, 687, 747                                                             |
| Goodmans      | 585, 589                                                                            |
| Gradiente     | 588, 687                                                                            |
| Granada       | 549, 581                                                                            |
| Grundig       | 556                                                                                 |
| Harmon/Kardon | 568, 592                                                                            |
| Harwood       | 681                                                                                 |
| Hinari        | 589                                                                                 |
| Hitachi       | 536, 538, 539, 540, 588, 595, 597, 680, 682, 686                                    |
| ITT           | 518                                                                                 |
| JC Penney     | 554, 581, 591, 592, 594, 595, 600, 674, 675, 676, 678, 679, 680, 681, 685, 686, 687 |
| Jensen        | 595, 680, 682                                                                       |
| JVC           | 561, 562, 563, 581, 592, 594, 600, 674, 682, 686                                    |
| Kenwood       | 562, 581, 592, 594, 600, 674, 677, 682, 683                                         |
| KLH           | 681                                                                                 |
| Kodak         | 676, 678                                                                            |
| Lloyds        | 683, 688                                                                            |
| Logik         | 589, 681, 685                                                                       |
| Luxor         | 518                                                                                 |

| VCR             | CODES                                                                     |
|-----------------|---------------------------------------------------------------------------|
| LXI             | 676                                                                       |
| Magnasonic      | 685, 687                                                                  |
| Magnavox        | 527, 533, 554, 556, 678, 679, 684, 685                                    |
| Marantz         | 554, 556, 581, 585, 592, 594, 600, 602, 674, 677, 678, 683                |
| Matsushita      | 678                                                                       |
| Memorex         | 507, 533, 549, 554, 566, 581, 585, 588, 608, 675, 676, 678, 686, 687, 688 |
| MGA             | 512, 567, 568                                                             |
| Minolta         | 595, 680, 686                                                             |
| Mitsubishi      | 512, 562, 567, 568, 570, 571, 595, 680, 687                               |
| Motorola        | 678                                                                       |
| MTC             | 544, 588, 675, 685                                                        |
| Multitech       | 579, 588, 675, 677, 681                                                   |
| NAD             | 573                                                                       |
| NEC             | 562, 581, 592, 594, 600, 602, 674, 677, 682, 683                          |
| Nikko           | 676                                                                       |
| Noblex          | 675                                                                       |
| Olympus         | 678                                                                       |
| Optimus         | 676, 687                                                                  |
| Optonica        | 585                                                                       |
| Orion           | 506, 684, 687                                                             |
| Panasonic       | 523, 554, 598, 614, 628, 633, 678, 679, 684, 685, 688, 747                |
| Pentax          | 592, 595, 677, 680, 683, 686                                              |
| Pentax Research | 594                                                                       |
| Perdio          | 588                                                                       |
| Philco          | 554, 678, 679, 686                                                        |

| VCR         | CODES                                                                               |
|-------------|-------------------------------------------------------------------------------------|
| Philips     | 554, 556, 585, 678, 684                                                             |
| Pioneer     | 562, 573, 574, 575, 576, 600, 674, 680,                                             |
| Portland    | 546, 677                                                                            |
| Proscan     | 605, 607                                                                            |
| Proton      | 685                                                                                 |
| Quasar      | 554, 678, 679, 747                                                                  |
| Radio Shack | 512, 534, 549, 554, 581, 584, 585, 588, 607, 608, 610, 675, 676, 678, 679, 687, 688 |
| Radix       | 676                                                                                 |
| RCA         | 518, 525, 527, 528, 591, 595, 605, 607, 615, 631, 649, 675, 678, 680, 686           |
| Ricoh       | 502                                                                                 |
| Runco       | 533                                                                                 |
| Saisho      | 506                                                                                 |
| Salora      | 567, 581                                                                            |
| Samsung     | 515, 517, 534, 579, 591, 675                                                        |
| Sansui      | 544, 562, 600, 674, 682, 685                                                        |
| Sanyo       | 549, 581, 582, 583, 608, 675, 688                                                   |
| SBR         | 556                                                                                 |
| Schneider   | 589                                                                                 |
| Scott       | 508, 534, 559, 590, 684, 687                                                        |
| Sears       | 548, 549, 581, 584, 595, 608, 610, 676, 678, 680, 683, 684, 686, 687, 688           |
| Sentra      | 546                                                                                 |
| Sharp       | 512, 585, 607, 625                                                                  |
| Shintom     | 589, 595, 681, 685                                                                  |
| Singer      | 678, 681, 685                                                                       |
| Sony        | 500, 501, 502, 504, 768                                                             |

| VCR             | CODES                                                      |
|-----------------|------------------------------------------------------------|
| STS             | 678                                                        |
| Sylvania        | 554, 556, 567, 588, 678, 679                               |
| Symphonic       | 588, 594, 683, 688                                         |
| Tandy           | 581, 588                                                   |
| Tashiko         | 588, 676                                                   |
| Tatung          | 594, 682                                                   |
| Teac            | 588, 594, 682                                              |
| Technics        | 554, 633, 678                                              |
| Teknika         | 554, 588, 676, 678, 687                                    |
| Toshiba         | 534, 535, 567, 584, 590, 680, 684, 688                     |
| Totevision      | 591, 675, 676, 687                                         |
| Unitech         | 675                                                        |
| Vector Research | 534, 592, 600, 674, 677, 683                               |
| Video Concepts  | 534, 568, 592, 600, 674, 677, 683                          |
| Wards           | 534, 588, 595, 608, 675, 676, 678, 680, 681, 684, 687, 688 |
| XR-1000         | 588, 678, 681                                              |
| Yamaha          | 581, 592, 594, 600, 674, 682, 683                          |
| Zenith          | 500, 501, 533, 747                                         |

### TV/VCR COMBO CODES

**Programming for combination devices:** Program the remote control in TV mode and then in VCR mode.

| TV/VCR    | TV Codes | VCR Codes |
|-----------|----------|-----------|
| Broksonic | 748      | 748       |
| Goldstar  | 747      | 747       |
| Panasonic | 747      | 747       |
| Quasar    | 747      | 747       |

| TV/VCR | TV Codes | VCR Codes |
|--------|----------|-----------|
| Zenith | 747      | 747       |

### DVD PLAYER CODES

**Programming in AUX mode:**  
Press 1 before entering the DVD code.

| DVD Players | Codes                        |
|-------------|------------------------------|
| Aiwa        | 634, 694, 751                |
| Alpine      | 653                          |
| Apex        | 654, 655, 743, 744           |
| Broksonic   | 656, 752                     |
| Clarion,    | 696                          |
| Classic     | 695                          |
| Daewoo      | 657                          |
| Denon       | 697, 698, 699, 700           |
| Emerson     | 658, 701                     |
| Fisher      | 659                          |
| Funai       | 658                          |
| GE          | 702, 703                     |
| Go Video    | 692, 693                     |
| GPX         | 704                          |
| Hitachi     | 632, 635, 660, 705, 706, 707 |
| JVC         | 636, 689, 708, 711           |
| Konka       | 637, 638, 753                |
| Koss        | 745                          |
| Magnavox    | 626, 661                     |
| Memorex     | 709                          |
| Mintek      | 710                          |
| Mitsubishi  | 629                          |
| NAD         | 701                          |
| Norcent     | 762                          |
| Onkyo       | 713                          |
| Oritron     | 723                          |

| DVD Players | Codes                                  |
|-------------|----------------------------------------|
| Panasonic   | 639, 662, 663, 714, 715, 716, 717, 734 |
| Philips     | 640, 641                               |
| Pioneer     | 665, 718, 719                          |
| Proscan     | 720                                    |
| Qwestar     | 721, 723                               |
| RCA         | 627, 650, 666, 690, 742, 749           |
| Sampo       | 724                                    |
| Samsung     | 651, 652, 667, 668, 691, 740, 741      |
| Sansui      | 725, 754                               |
| Sanyo       | 643, 726                               |
| Sharp       | 669, 727, 746                          |
| Sherwood    | 728                                    |
| Sony        | 617, 644, 645, 670, 671, 729, 730, 731 |
| Sylvania    | 658                                    |
| Teac        | 732                                    |
| Technics    | 733                                    |
| Techwood    | 664                                    |
| Toshiba     | 616, 646, 647, 672, 735, 736, 750      |
| Yamaha      | 737, 738, 739                          |
| Zenith      | 648, 673                               |

### DVD/VCR COMBO CODES

**Programming for combination devices:** Program the remote control in TV mode and then in VCR mode

| DVD/VCR  | Codes    |
|----------|----------|
| Go Video | 692, 693 |
| JVC      | 689      |
| RCA      | 690      |
| Samsung  | 667, 691 |



### TUNER/AMPLIFIER CODES

**Programming in AUX mode:**  
Press 2 before entering the tuner/  
amplifier code.

| Tuner/<br>Amplifier | Codes                                       |
|---------------------|---------------------------------------------|
| Aiwa                | 636, 641, 656, 687, 718, 720, 724, 726, 775 |
| Carver              | 653                                         |
| Citizen             | 709                                         |
| Curtis Mathes       | 734                                         |
| Denon               | 647, 674                                    |
| Fisher              | 653, 741                                    |
| GE                  | 711                                         |
| Goldstar            | 677, 690                                    |
| Harmon/Kardon       | 640, 672, 751                               |
| Hitachi             | 717, 754                                    |
| JBL                 | 640                                         |
| JVC                 | 637, 683, 703, 725                          |
| Kenwood             | 649, 676, 691, 726, 728, 745                |
| Luxman              | 752                                         |
| Magnavox            | 654, 705, 740                               |
| Marantz             | 651, 740, 742, 743                          |
| NAD                 | 739                                         |
| Nakamichi           | 671, 748, 750                               |
| NEC                 | 716, 739                                    |
| Onkyo               | 642, 660, 662, 678                          |
| Optimus             | 648, 664, 734, 744, 749                     |
| Panasonic           | 643, 644, 652, 742, 746                     |
| Pioneer             | 658, 667, 668, 679, 702, 734                |
| Proton              | 654, 705                                    |
| Quasar              | 652, 742, 746                               |
| Radio Shack         | 744                                         |
| RCA                 | 635, 638, 704, 727                          |



| <b>Tuner/<br/>Amplifier</b> | <b>Codes</b>                         |
|-----------------------------|--------------------------------------|
| Sansui                      | 753                                  |
| Sanyo                       | 741                                  |
| Sharp                       | 712, 713, 714, 715,<br>749           |
| Sherwood                    | 646, 670, 736, 738,<br>744           |
| Sony                        | 639, 645, 650, 687,<br>728, 729, 730 |
| Teac                        | 684, 737                             |
| Technics                    | 643, 644, 652, 742,<br>746           |
| Toshiba                     | 710                                  |
| Yamaha                      | 663, 730, 731, 732,<br>733, 745, 747 |

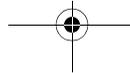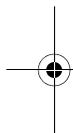

## TROUBLESHOOTING THE KIT

| What's Happening                                                                                                                                                                                                                                                                   | What's Wrong                                                                        | What You Can Do                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>The kit doesn't work well. <i>That is</i>, when you press a remote control button, either nothing happens or the action you want is repeated. Or, the red light flashes or flickers (maybe very dimly) inside the converter, even though you don't press any remote button.</p> | <p>The converter may be picking up stray UHF signals from other devices nearby.</p> | <p><b>Note:</b> When the converter picks up stray UHF signals, even when you don't press a remote button, its red light comes on. You may need to turn off the room lights to be able to see when this happens.</p> <p><b>Note:</b> To find out which device sends out the UHF signals that the converter picks up, unplug one device at a time and note when the converter's red light stays off.</p> <ul style="list-style-type: none"> <li>• Move the remote back to at least three feet from the converter, so the converter doesn't pick up stray UHF signals from the remote itself.</li> <li>• Move the converter's antenna around, or put it down part way so it doesn't pick up stray UHF signals.</li> <li>• Move the converter around to find a place where it doesn't pick up stray UHF signals.</li> <li>• Re-route the converter's power cord, so the converter doesn't pick up stray UHF signals through its own cord.</li> <li>• Move the other devices so the converter doesn't pick up their UHF signals.</li> </ul> |
| <p>The UHF Pro remote <i>doesn't</i> control the satellite receiver in the same room, or does so only some of the time, but <i>does</i> control the receiver from other rooms.</p>                                                                                                 | <p>The receiver may be picking up stray IR signals from other devices nearby.</p>   | <ul style="list-style-type: none"> <li>• Make sure the front of the converter, with the DISH Network symbol, points toward the receiver's front panel.</li> <li>• Move the converter closer to the receiver, and make sure the converter has a clear signal path to the receiver.</li> <li>• If you don't use an IR extender, try using one. If you do use an IR extender, make sure the extender's IR head is in the correct place. See page 5.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

| What's Happening                                                                                                                                                    | What's Wrong                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | What You Can Do                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>When you press a button on the remote control, the red light flashes inside the converter (but doesn't stay on) and the receiver doesn't do what you expect.</p> | <ul style="list-style-type: none"> <li>• The converter may not be facing the satellite receiver's front panel.</li> <li>• If you use an IR extender, maybe you didn't connect the extender the correct way.</li> <li>• The converter may be picking up UHF signals from a neighbor's remote control, which may block signals from your remote control.</li> <li>• The converter may be picking up UHF signals from a neighbor's remote control, which may be controlling your receiver.</li> </ul> | <ul style="list-style-type: none"> <li>• Make sure the front side of the converter, with the DISH Network symbol, points toward the receiver's front panel, so the receiver's IR sensor can get the signals.</li> <li>• If you don't use an IR extender, try using one. If you do use an IR extender, make sure the extender's IR head is in the correct place.</li> <li>• UHF signal blocks shouldn't happen very often or for very long. Press the remote control button again.</li> <li>• Change the address of your remote control and receiver. See page 9.</li> </ul> |
| <p>When you press a button on the remote control, the red light inside the converter doesn't flash and the receiver doesn't do what you expect.</p>                 | <p>The converter may not be receiving the remote control signals.</p>                                                                                                                                                                                                                                                                                                                                                                                                                              | <ul style="list-style-type: none"> <li>• Make sure you plug in the converter's power cord.</li> <li>• Make sure the UHF Pro remote control is working (check and maybe replace the batteries).</li> <li>• Try to use the remote control closer to the converter. Move the converter's UHF antenna around for better reception.</li> <li>• If you have put the converter inside an enclosure, put it outside the enclosure.</li> <li>• Make sure the remote and converter are set to the same key setting.</li> </ul>                                                        |
| <p>Devices outside the system show UHF interference.</p>                                                                                                            | <p>The UHF Pro remote control uses UHF signals to control the receiver. These signals or stray UHF signals from the converter may cause the interference.</p>                                                                                                                                                                                                                                                                                                                                      | <p>Stop using the UHF Pro remote for a while, to see if this stops the interference. If the remote control causes the interference, you'll have to avoid using it whenever you don't want interference with other devices that use UHF.</p>                                                                                                                                                                                                                                                                                                                                 |

| What's Happening                                                                        | What's Wrong                                                                                                                                                                                                                                                                                                                                             | What You Can Do                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-----------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>The receiver does things even though you don't press any remote control buttons.</p> | <ul style="list-style-type: none"> <li>• The converter may be picking up UHF signals from a neighbor's remote control or from another UHF Pro remote control in the residence, which may be controlling your receiver.</li> <li>• The receiver may be picking up stray IR signals from another DISH Network remote control being used nearby.</li> </ul> | <ul style="list-style-type: none"> <li>• Change the address of your remote control and receiver. See page 9.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <p>Your UHF Pro remote control does not work well from far away</p>                     | <p>You may be experiencing interference from objects near your converter's antenna.</p>                                                                                                                                                                                                                                                                  | <ul style="list-style-type: none"> <li>• Make sure the UHF antenna is connected to the converter and not touching anything else.</li> <li>• Vary the tilt angle of the converter's UHF antenna. Locate the UHF antenna tip away from other electronics equipment or metal surfaces, even if separated by wooden shelving.</li> <li>• Move the converter to different locations. For best results, place the converter as high as possible, above all other equipment in your entertainment center.</li> <li>• Move any nearby off-air antennas away from the UHF remote antenna. Do not place an off-air antenna on your converter.</li> </ul> |

## LIMITED WARRANTY

This warranty extends *only* to the original user (“you,” “your”) of the DISH Network IR-to-UHF Pro Upgrade Kit (“the Kit”) and is *limited* to the purchase price of the Kit. EchoStar Technologies Corporation and its affiliated companies (“we,” “our,” “us”) warrant the Kit against defects in materials or workmanship as follows.

For one (1) year from the original date of purchase, if we find that the Kit is defective subject to the limits of this warranty, we will replace the Kit at no charge for parts or labor. We warrant any such work done against defects in materials or workmanship for the remaining part of the original warranty period.

This warranty *does not cover* installation of the DISH Network System; consumer instruction; physical set up or adjustment of any consumer electronic device; signal reception problems; loss of use of the equipment; unused programming charges due to equipment malfunction; cosmetic damage; damage due to lightning, electrical or telephone line surges, fire, flood, or other acts of Nature; accident; misuse; abuse; repair or alteration by other than our factory service; negligence; commercial or institutional use; improper or neglected maintenance; equipment sold AS IS or WITH ALL FAULTS; equipment removal or reinstallation; shipping damage if the equipment was not packed and shipped in the manner we prescribe; nor equipment purchased, serviced, or operated outside the contiguous United States of America.

REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS YOUR EXCLUSIVE REMEDY. WE SHALL NOT BE HELD LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESSED OR IMPLIED WARRANTY ON THE KIT, NOR FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE RESULTING FROM THE USE OF, OR INABILITY TO USE, THE KIT. UNDER NO CIRCUMSTANCES SHALL OUR LIABILITY, IF ANY, EXCEED THE PURCHASE PRICE PAID FOR THE KIT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THE KIT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. WE RESERVE THE RIGHT TO REFUSE TO HONOR THIS WARRANTY IF WE DETERMINE ANY OF THE ABOVE EXCEPTIONS TO HAVE CAUSED THE KIT NOT TO HAVE PERFORMED PROPERLY. THIS WARRANTY SHALL BE VOID IF ANY FACTORY-APPLIED IDENTIFICATION MARK HAS BEEN ALTERED OR REMOVED. THIS WARRANTY SHALL ALSO BE VOID IF ANY OF THE PARTS OF THE KIT HAVE BEEN OPENED BY AN UNAUTHORIZED PERSON.



This warranty gives you specific legal rights which may vary from state to state. Some states do not allow the exclusion or limitations of incidental or consequential damages, or allow limitations on the duration of an implied warranty, so those limitations may not apply to you.

### **ADVANCE EXCHANGE PROGRAM**


The Advance Exchange Program allows you to have replacement equipment shipped immediately to you (depending upon where you live, it could take three to five business days). Along with replacement equipment, you will receive a prepaid shipping label and instructions on how to return the defective equipment.

The shipping charge, for receiving replacement equipment and returning the defective equipment, is a one time fee based on EchoStar's competitive bulk shipping rates (additional charges may apply outside of the continental US). This fee will be charged to your billing account or your valid credit card.

If you do not ship the defective equipment to EchoStar within ten days after receiving the replacement, your billing account or credit card will be charged the market price of the replacement. If you return the defective equipment after ten days, you will receive a full refund less an administrative fee.

If your equipment is out of warranty and can be repaired your billing account or credit card will be charged the standard repair fee for the replacement.

If damage to the defective equipment is found, which EchoStar in its sole discretion determines has voided the warranty, or makes the equipment unrepairable, your billing account or credit card will be charged the market price of the replacement.

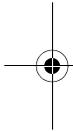


### **POST RECEIPT EXCHANGE PROGRAM**

You may choose to ship the equipment to us at your cost. To provide faster service, upon receipt of your equipment you will be shipped a replacement. Your original equipment will not be available for return.

The equipment you return will be checked to verify whether it is covered under this warranty. If the defective equipment is covered under this warranty, it will be replaced and shipped back to you at no additional cost (additional charges may apply outside of the continental US).

If your equipment is out of warranty and can be repaired your billing account or credit card will be charged the standard repair fee for the replacement.



If damage to the defective equipment is found, which EchoStar in its sole discretion determines has voided the warranty, or makes the equipment unrepairable, your billing account or credit card will be charged the market price of the replacement.

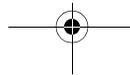



## IF YOU NEED HELP

1. Please review these *Instructions*.
2. Please see *Troubleshoot the Kit* on page 42.
3. Call the Customer Service Center at 1-800-333-DISH (3474).  
Please have the date of purchase and your customer account number ready.
4. A representative will help you.
5. If the rep finds that you should return the Kit, you'll get a telephone number to call for a Return Authorization (RA) number.  
*Before you ship* any equipment to us, you *must* get an RA number.
6. You *must* package returned equipment properly. Follow the instructions that the rep gives you.
7. Write the RA number in large, clearly visible characters on the *outside* of the shipping box used to return the equipment.  
*To avoid confusion and misunderstandings, we'll return shipments without an RA number clearly visible on the outside of the box to you at your cost.*
8. What we'll do:
  - Check the Kit, including whether it is covered under this warranty.
  - Replace any Kit that we find is defective with a new or refurbished Kit, if the defective Kit is covered under this warranty. We'll ship the replacement Kit at our cost.
  - If a defective Kit is not covered under this warranty, we'll tell you. We may assess you a flat rate charge for a replacement Kit, including shipping and insurance.

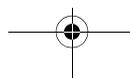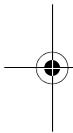








## REGULATORY FACTORS

EchoStar Technologies Corporation, 94 Inverness Terrace East, Englewood CO., (303) 706-4000, declares that:




This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:



- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

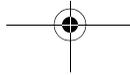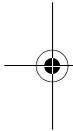


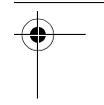
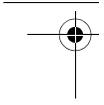
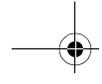








**Notes**

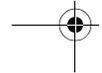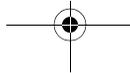
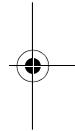


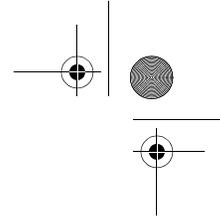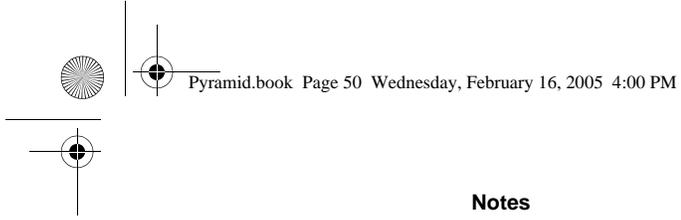





**Notes**

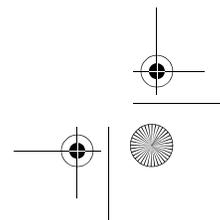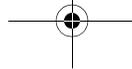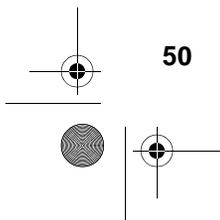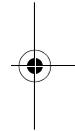

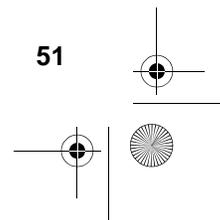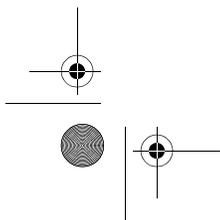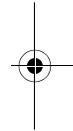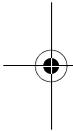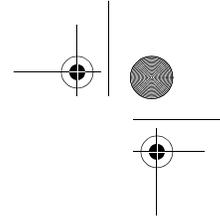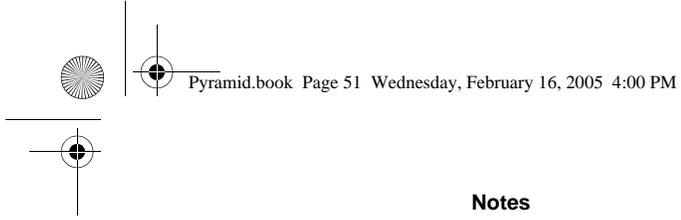

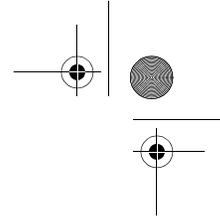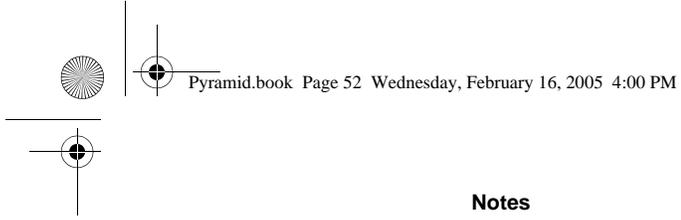

**Notes**

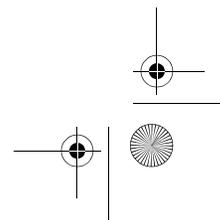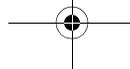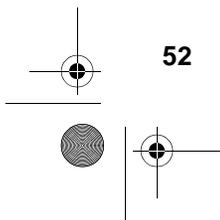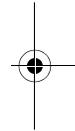




Copyright © 2005  
EchoStar Technologies Corporation  
Englewood, Colorado 80112  
All rights reserved.

The information in these instructions may change without notice. We may issue revisions to tell you about such changes. Please send any comments or questions on these instructions directly to:

*EchoStar Technologies Corporation,  
Technical Publications, 94 Inverness Terrace East,  
Englewood, Colorado 80112*



Part Number: 135331  
Printed in the United States of America.

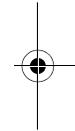

DISH Network is a registered trademark of EchoStar Satellite L.L.C.

