You do not need to return your old remote control to DISH Network.*

Remote C<u>ontrol Manual</u>

Replacement Remote Control Set-up

- Insert fresh batteries, making sure to match the plus ("+") ends with the plus markings on the battery
 case.
- Turn on the receiver and TV using the front panel buttons.

To set your new Dish remote to adjust the receiver volume:

Note: Please make sure the TV sound volume is <u>not</u> turned down or muted before beginning.

- Press the Menu button on the receiver remote.
- Use the Arrow buttons to highlight the System Setup option, then press the Select button.
- Select the Volume Control option.
- Select the **DISH Remote Volume Control** option to control volume using your DISH remote. Select **TV Remote Volume Control** to use your existing TV remote to control the volume.
- Highlight and select the **Save** option.

Using the Remote Control

Press the **Power** button to turn the receiver on or off.

Press **Menu** to open the main menu.

Use the **Page Up** or **Down** arrows to rapidly move through menu or guide information.

Press the **Mute** button to activate the mute function. Press the **Mute** button a second time to restore the sound.

Press the (+) side of the **Volume** button to increase the sound volume and the (-) side to reduce the sound volume.

Press the **Guide** button to view the digital programming guide.

Press the **Up** or **Down** arrows to select channels or navigate through a menu.

Press the **Theme** (Left) arrow to navigate the menus by theme (sports, movies, etc...) and the **Browse** (Right) arrow to view future programming choices.

Press **Select** to activate the item that you have highlighted.

Press **Info** to view more information about a program or the highlighted item.

Press **View** to display the program banner.

Press Cancel to guit or exit any menu that you have activated.

Press the Recall button to go back to the last channel that you were viewing

Use the numbers on the **Number pad** to go directly to the channel you want to view.

