

Voice Remote


Using Otto™ Technology

Quick Start Guide




Turning On Your Remote

- 1 Remove the back cover by pushing the tab upward, and remove the *PULL* tab

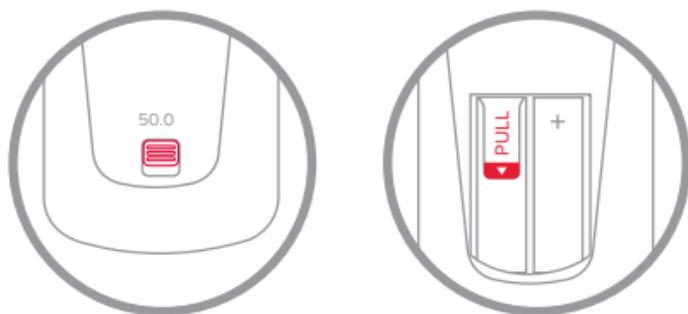


- 2 Replace the back cover

- 3 Open the front panel of your DISH receiver, and press the *SYS INFO* button

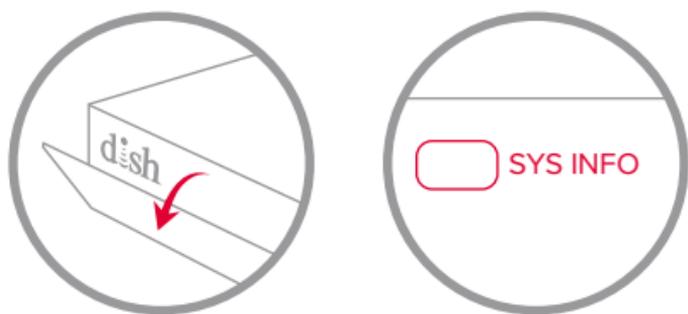

- 4 Press the *SAT* button on the side of the remote control

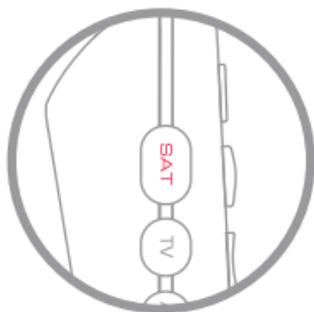

You will hear three beeps from the remote control, indicating it has paired with your DISH receiver

Pairing Your Remote

- 1 Press the home button twice



- 2 Select *Settings* and then *Remote Control*




Settings



Remote


- 3 Select *TV* and then *TV Pairing Wizard*

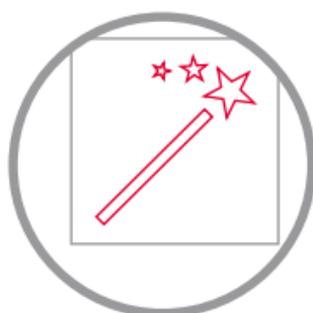


- 4 Follow the prompts to configure the Otto™ software

- 5 If desired, pair your remote with an *Auxiliary Device* such as a Blu-ray™ player or stereo

Exploring Your Remote

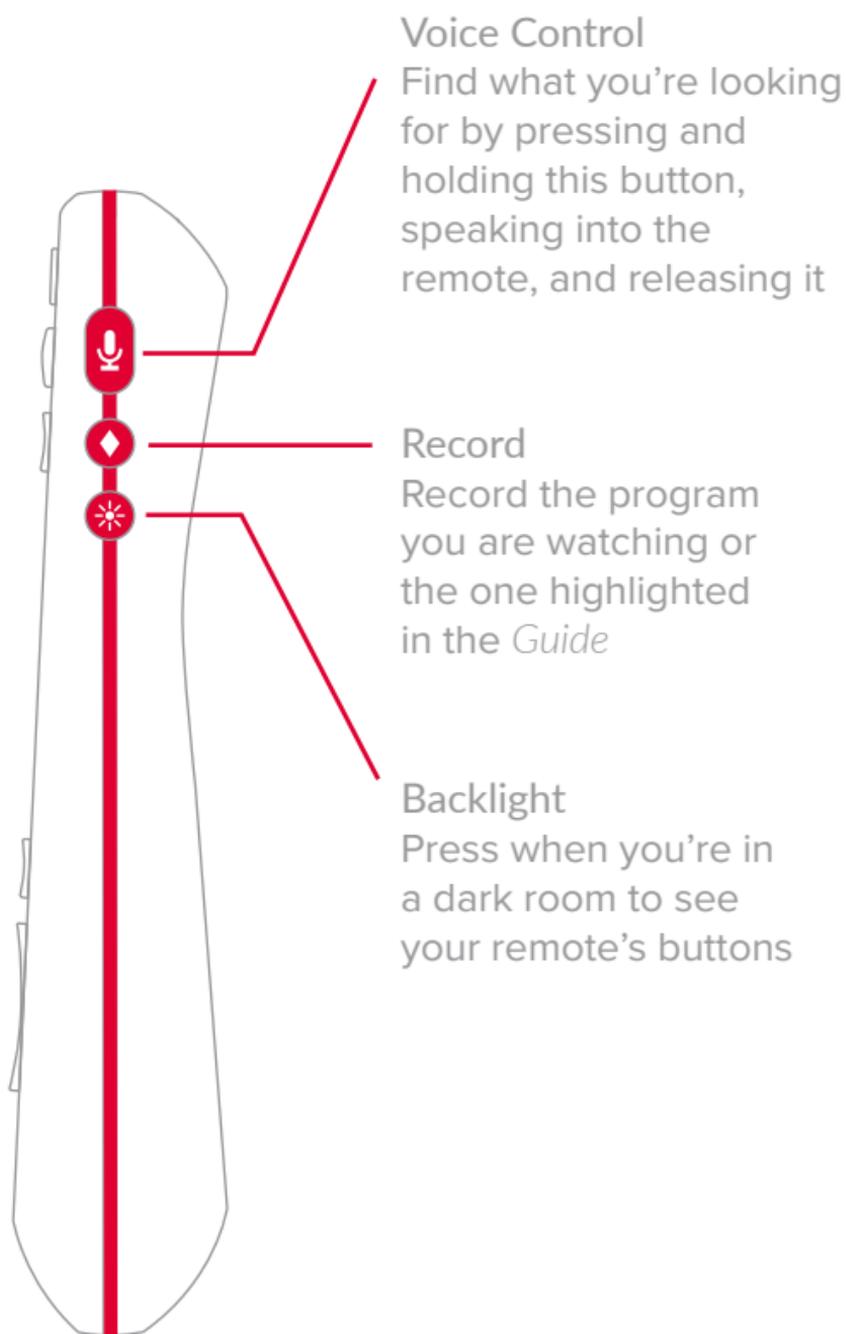

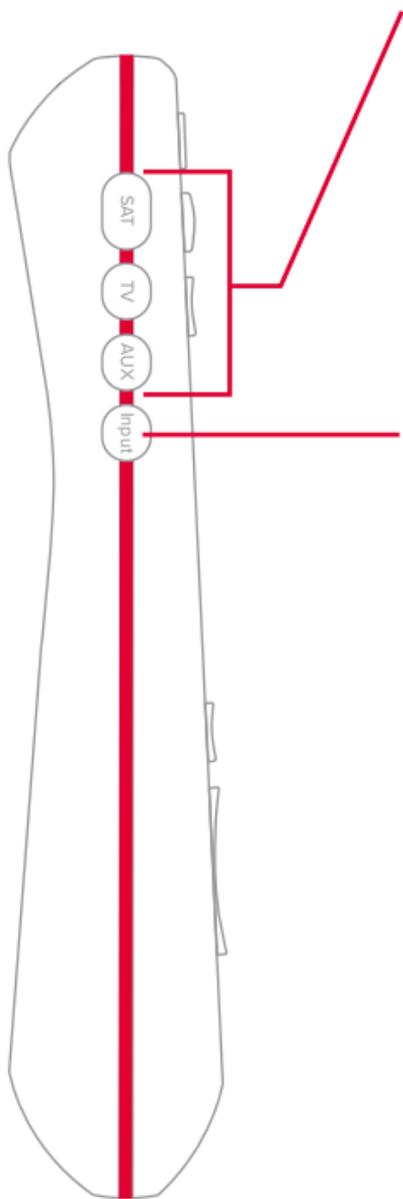

Mode Buttons


Use your voice remote as a universal remote control by pairing it with your TV and another auxiliary device such as a Blu-ray™ player or stereo

Input

Change inputs when in TV mode

When in SAT mode, use this button to swap picture-in-picture or multi-view windows

Exploring Your Remote

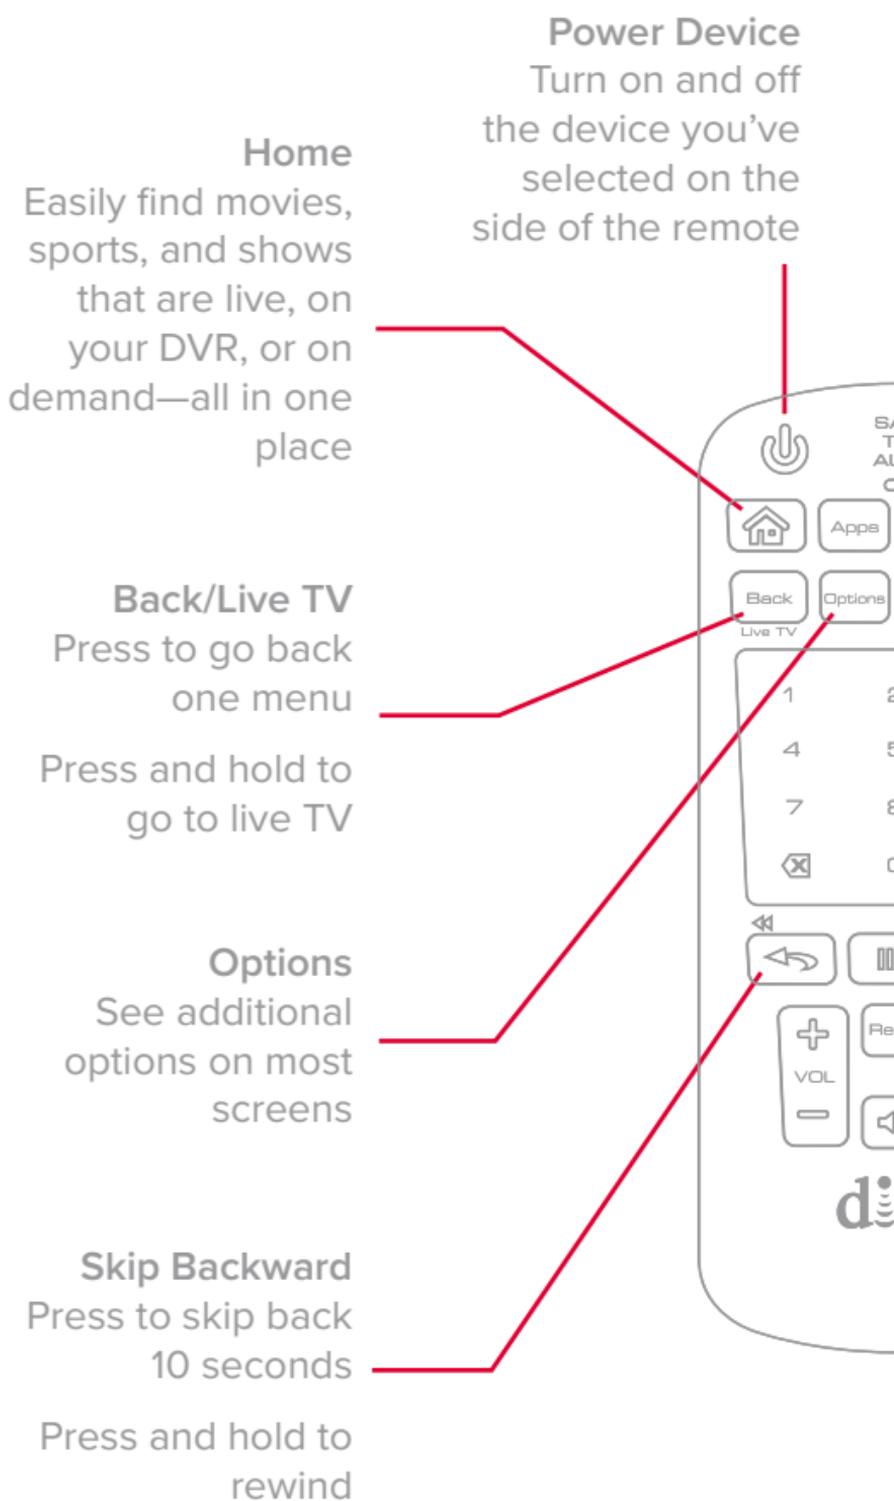

Also, use the skip buttons to change tabs in menus quickly

Power TV

When the remote is paired with your TV, this button turns it on and off

123

Turn your touchpad into a numeric keypad

Touchpad

Navigate menus by swiping, dragging, and tapping

Press to select items

Info/Help

Press to get more information about a program

Press and hold to get quick tips on most screens

Skip Forward

Press to skip forward 30 seconds

Press and hold to fast-forward


Channel Up & Down

In addition to changing channels, you can use these buttons to page through menus such as the *Guide*



Using the Touchpad

Press

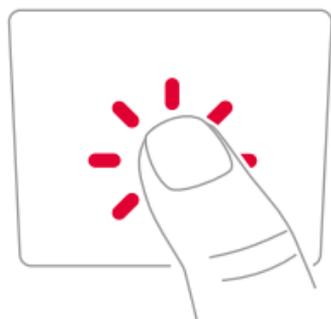


Using your thumb, press the touchpad in the center until it clicks to select the highlighted item

Drag




Without pressing, lightly drag your thumb across the touchpad to move the highlight

Swipe

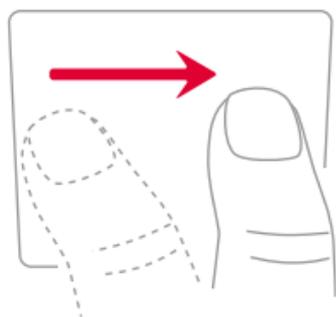

To move the highlight more quickly, swipe your thumb across the touchpad, without pressing, and then lift your thumb


Tap

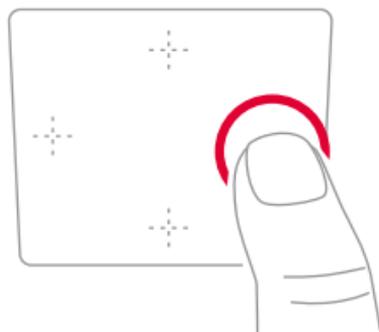

Without pressing, lightly tap on an edge of the touchpad to move the highlight one item in that direction

Using Voice Commands

- 1 Press and hold the voice button on the side of the remote

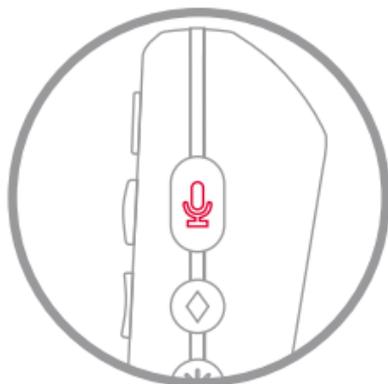

- 2 Say the name of a movie, TV show, sport, sports team, actor, or collection



- 3 Release the voice button
- 4 Try other examples such as

“Watch ESPN”

“Big Bang Theory”

“Batman movies”

“Action movies with Matt Damon”

“Launch Game Finder”

“Denver Broncos”

“Guide”

“DVR”

Locating Your Remote Anytime

- 1 Open the front panel of your DISH receiver



- 2 Press the *LOCATE REMOTE* button



You will hear a series of beeps from your voice remote, allowing you to find it

Regulatory Information

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference,
and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by following one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this device may void your authority to operate this equipment.

Safety Instructions

You must keep safety in mind while using this device. Keep these and any other instructions for future reference.

Observe Warnings: Carefully follow all warnings on the device and in the operating instructions.

Heat: Do NOT place the device near heat sources such as radiators, stoves, heat registers, or other appliances that produce heat.

Case and Use

Cleaning: Do NOT use liquid, abrasive, solvent, or aerosol cleaners. Use a damp cloth for cleaning.

When Not in Use: Remove the batteries if this device is to be left unattended or unused for a long period of time.



WARNING - This product can expose you to Bisphenol A (BPA) which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov



Refer servicing to qualified personnel when a solid object or liquid has fallen onto or into the device.



Do NOT attempt to service this device. Refer all servicing to qualified personnel. Opening covers other than the battery cover will void the warranty.

Need Help?



Press and hold *Info/Help*



Channel 103



The Hopper Features Guide



mydish.com/support/remotes



TUNED IN TO YOU™