

5. Deleting a Scheduled Timer (Future Recording)

- If you want to delete a scheduled recording or timer, press the DVR button. Select "My Recordings."



The "Dish on Demand" screen first appears. Then the "My Recordings" screen appears.

- Scroll up and select "Schedule."



The "Daily Schedule" screen appears.

- Scroll up and select "Timers."



The "Timers List" screen appears.

- Scroll to the left until the timer you would like to delete is highlighted and then press SELECT.



The "Timer Event" screen appears.

- Scroll up and select "Delete."



A warning message appears.

- Select "Yes."



The "Timers List" appears and the deleted schedule/timer will be gone.

1. Using Your DVR While Watching Live TV

Pause TV

- If you are interrupted while watching TV, press PAUSE.



The program pauses for up to 1 hour.

Resume watching

- When you would like to resume watching TV, press PLAY.



The program resumes.

Skip back (10 seconds)

- If you missed something and want to see it again, press SKIP BACK to go backward 10 seconds at a time.



The program skips back 10 seconds at a time.

Skip forward (30 seconds)


- Press SKIP FWD to go forward 30 seconds at a time.



The program skips forward 30 seconds at a time, until you reach live TV.

View live TV

- If you want to view live TV, press VIEW LIVE TV.

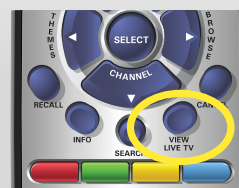

The program goes to live TV.



2. Recording a TV program

Record a program NOW

- a. If you are watching TV and want to begin recording that program, press **RECORD** and then select **“OK.”**



The “rec” logo appears and recording will begin.

Record a program in the FUTURE

- b. If you want to schedule a recording for a program that takes place in the future, press **GUIDE**.



The Program Guide appears.

- c. Scroll through the Guide until the program that you want to record is highlighted and then press **SELECT**.



The “Create Timer” screen appears.

- d. Scroll through and select the Frequency you would like to use to record the program and then select **“Create Timer.”**



The attention screen appears. Then the Program Guide will appear with a record icon next to the program.

FREQUENCY

All Episodes	Records all episodes, including re-runs.
New Episodes	Records only new episodes.
Once	Records the show only one time.

3. Watching a Recording

- a. If you would like to view a program that you previously recorded, press the **DVR** button.



The “Dish On Demand” screen appears.

- b. Select **“My Recordings.”**



The “My Recordings” screen appears.

- c. Scroll through until the program you would like to watch is highlighted, and press **SELECT**.



The “DVR Event” screen appears. “Start” is highlighted.

- d. Select **“Start”** to play your recording.

4. Deleting a Recorded Program

- a. If you want to delete a recorded program, press the **DVR** button.
b. Select **“My Recordings.”**



The “Dish on Demand” screen first appears. Then the “My Recordings” screen appears.

- c. Scroll through until the program you would like to delete is highlighted and then press **SELECT**.



The “DVR Event” screen appears.

- d. Scroll down and select **“Delete.”**



A warning message appears.

- e. Select **“Yes.”**



A confirmation message appears.